



Sandall Stones Industrial Estate,  
Doncaster, South Yorkshire, DN3 1QR

+44 (0)1302 310 113  
enquiries@prosolveproducts.com  
www.prosolveproducts.com

ProSolve is trademark of S.T.L Trading  
Company Limited  
Reg in England No: 5230722  
VAT Reg No: 381 3533 58

## SAFETY DATA SHEET

ProSolve™ 4 Wheeled Applicator

BD4

### DESCRIPTION

4 Wheeled Applicator is used for marking out playing fields, car parks, warehouses, golf courses, tennis courts, leisure centres, roads etc. It aids users helping to ensuring that lines are kept straight. Designed to be easy to use, the applicator uses a thumb push trigger that allows for the perfect amount of paint to be transferred to the surface. This wheeled applicator is suitable for use with our semi-permanent linemarker and our temporary line marker.




Has guide disk feature on the inside of the wheel to give high quality edging finish. The disk is made out of tough plastic, built for long wearing. The 4

wheels is made out of rubber for better stainability and grip. If a crisper line is needed then the area can be marked with masking tape first.



This kit comes with two pair of M5 x 25 nut and bolt. Used for assembling the two parts of the applicator together.

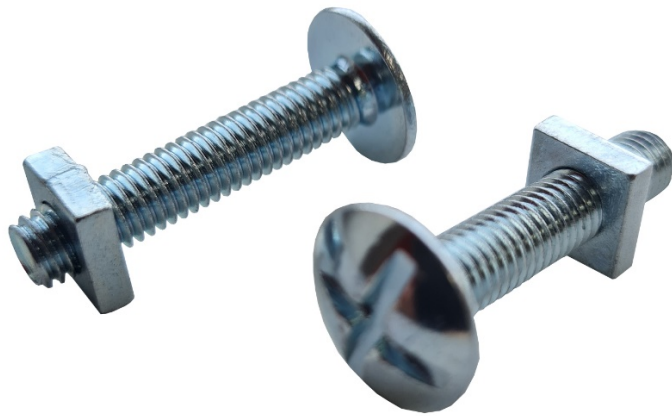

This applicator works with either 600ml - 750ml aerosol cans.



To make adjustments to the trigger system, simply unpin the clip (circled in blue) and swop to the other end of the bar (circled in red).

### **Measurements**

WHEEL - 15cm

HANDLE HIGHT – 80cm

LENGTH (FRONT WHEEL TO BACK) – 50cm

LINE MARKING WIDTH – 5cm

### **Materials**

Body frame – sheet metal with black painted coating.

Wheel rims – tough plastic white.

### **IMPORTANT NOTICE**

**All statements, technical information and recommendations are based on tests we believe to be reliable as at the date of hereof, but the accuracy or completeness thereof is not guaranteed. Please ensure before using the product that it is suitable for your intended use. Since the conditions and methods of use of the product and of the information referred to herein are beyond our control, other than for fraudulent misrepresentation, ProSolve expressly disclaims any and all liability as to any results obtained or arising from any use of the product or reliance on such information.**

**BEFORE USE, CONSULT THE SAFETY DATA SHEET OF THE PRODUCT.**